## BINDER Gas Supply Service | Art-No: 8012-0408

The external bottle changer permits automatic switching to a second gas bottler as soon as the first bottle is empty. It provides acoustical and optical alarms and is equipped with a zero-voltage alarm output for external monitoring systems. It can be used for two  $CO_2$  incubators max. and is suitable for bottles of  $CO_2$ ,  $O_2$ , and  $N_2$  gas.




## Scope of delivery

- Bottle changer control unit
- Mains supply unit with adapters
- Y-piece

## **Connection graphics:**

Connection of a BINDER incubator  $CO_2$  in two gas cylinders

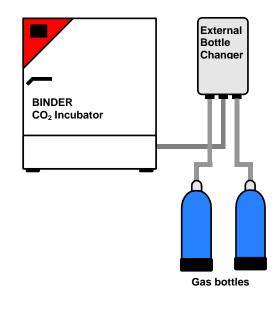

## Technische Daten:

Dimensions LxWxD (mm/inch): ca. 200 / 7.87 x 120 / 4.72 x 95 / 3.74

Weight Gas Supply Service: approx. 2 kg / 4.4 lbs.

Supply pressure: 0,3 bar/4.4 psi pu to 2,0 bar/29 psi

Permissible overpressure: max 3.0 bar / 43.5 psi

Operating voltage through mains supply 24 V DC

Connection voltage mains supply unit: 110V-240V

Type of protection: IP20

Automatical switching from the empty bottle to the new bottle if the pressure falls below 0,3 bar / 4.4 psi

- 4 hose clamps
- Wall hook

Connection of two BINDER incubators CO2 in two gas cylinders

